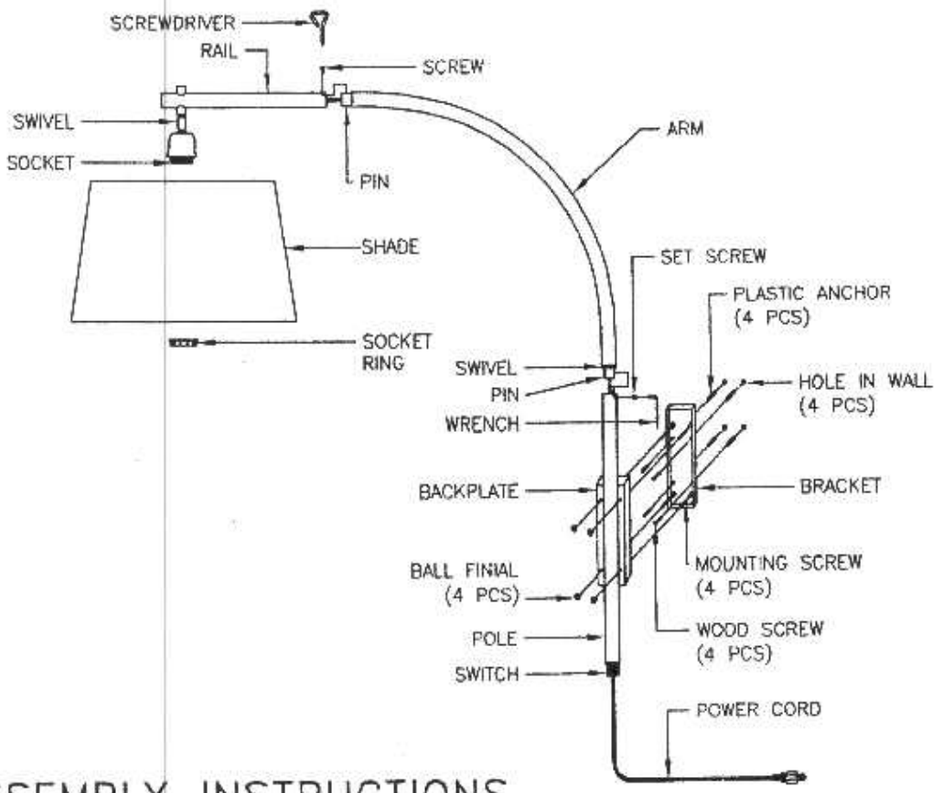

ASSEMBLY INSTRUCTIONS

READ AND SAVE THESE INSTRUCTIONS

READ INSTRUCTIONS ALL THE WAY THROUGH PRIOR TO ASSEMBLY.

THIS LAMP SHOULD TAKE APPROXIMATELY 5 MINUTES TO ASSEMBLE.

MAKE SURE ALL PARTS ARE FIRMLY HAND TIGHTENED (UNLESS DIRECTED TO USE A TOOL).

TOOLS: YOU WILL NEED THE FOLLOWING TOOLS OR EQUIPMENT: SCREWDRIVER, DRILL AND PLIERS.

UNPACK THE LAMP

YOU SHOULD HAVE RECEIVED THE FOLLOWING PARTS IN THE PACKAGE: SOCKET RING, SHADE, RAIL WITH SOCKET, ARM, BACKPLATE ASSEMBLY, SCREW AND SET SCREW. TO PROTECT THE FINISHES, PLACE ALL PARTS ON A SOFT SURFACE.

MOUNTING HARDWARE PACKAGE:
(2) 8/32 x 1-1/4" MOUNTING SCREWS, (4) WOOD SCREWS, (4) PLASTIC ANCHORS, SCREWDRIVER AND WRENCH.

ASSEMBLE THE FIXTURE:

1. INSERT PIN ON BOTTOM OF ARM INTO HOLE IN POLE AND SECURE WITH SET SCREW (WRENCH INCLUDED).
2. INSERT PIN ON TOP OF ARM INTO HOLE IN RAIL AND SECURE WITH SCREW (SCREWDRIVER INCLUDED).
3. REMOVE THE WALL BRACKET FROM THE BACKPLATE BY REMOVING THE (4) BALL FINIALS ON THE FRONT OF THE BACKPLATE.
4. PLACE WALL BRACKET IN THE DESIRED LOCATION ON THE WALL AND MARK WITH A PENCIL. (NOTE: THE WALL BRACKET SHOULD BE MOUNTED ON A WALL STUD USING A SCREWDRIVER. IF MOUNTING ON A HOLLOW AREA, DRILL 1/4" PILOT HOLES AND INSERT ANCHORS WHERE THE LOCATION WAS MARKED.)
5. ATTACH THE WALL BRACKET TO THE PLASTIC ANCHORS OR THE SPOTS THAT YOU MARKED ON STUD AND SECURE WITH (4) WOOD SCREWS.
6. RAISE THE BACKPLATE ASSEMBLY TO THE WALL, LINE UP MOUNTING SCREWS WITH HOLES IN BACKPLATE AND SECURE WITH THE (4) BALL FINIALS REMOVED ABOVE.
7. PLACE SHADE OVER SOCKET AND SECURE WITH SOCKET RING.
8. INSTALL A 150 WATT MAXIMUM MEDIUM BASE TYPE "A" BULB (NOT INCLUDED) INTO SOCKET.
9. PLUG THE POWER CORD INTO AN OUTLET AND TURN ON AT SWITCH.